



VMT-MXL 998-0368-00

Pop Out Video Wall Mount Installation Guide

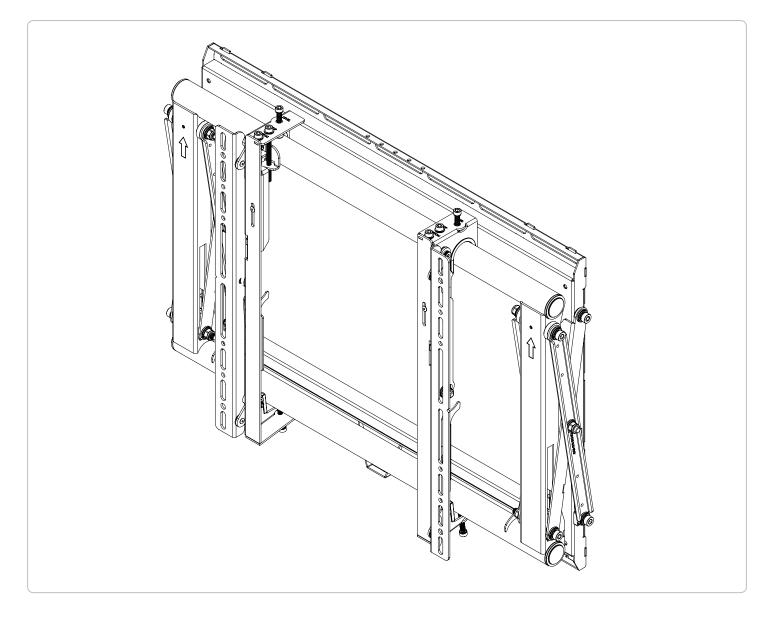


www.planar.com | North America Toll Free: 1-886-475-2627 | Direct: 1-503-748-1100 1195 NE Compton Drive, Hillsboro OR 97006 USA

Installation Guide

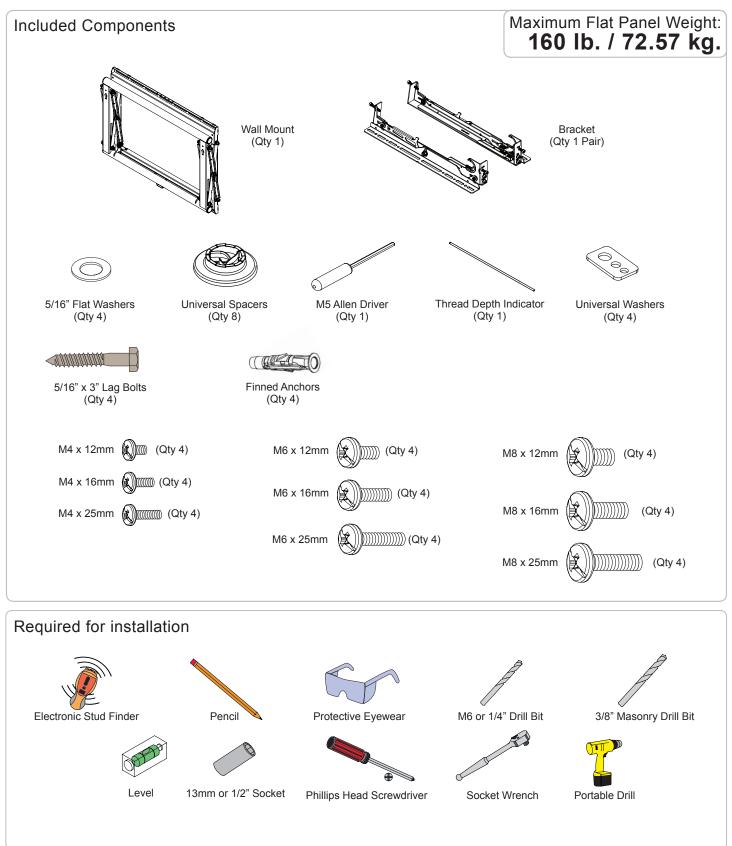





Wood Stud Installation

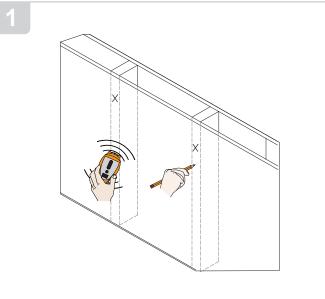


- 1. Use a stud finder to determine the wall studs in the vicinity of the mount.
- 2. Use a pencil to mark each of the wall studs.

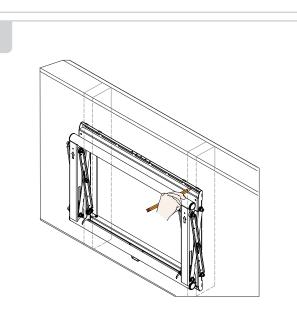

Use a pencil to mark the upper right mounting location of the wall stud.

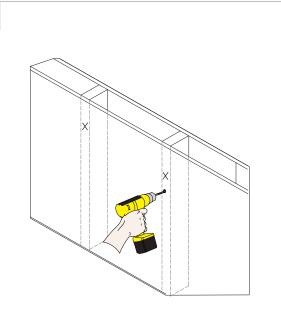


Drill a pilot hole using a M6 or 1/4" drill bit on the stud that was marked on the upper right.

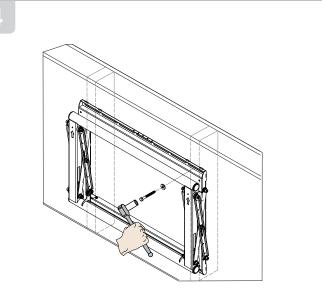

- 1. Place the mount against the wall and align it with the pilot hole.
- 2. Insert one (1) 5/16" x 3" lag bolt one (1) 5/16" washer into the upper right pilot hole.
- 3. Use a socket wrench and a 1/2" socket to tighten the lag bolt.
- 4. Do not over tighten the lag bolt.




Installation Guide

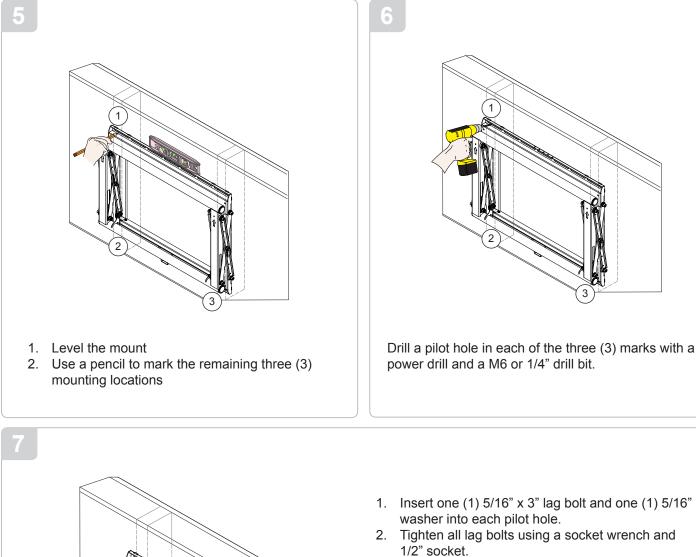

3. Do not over tighten the lag bolts




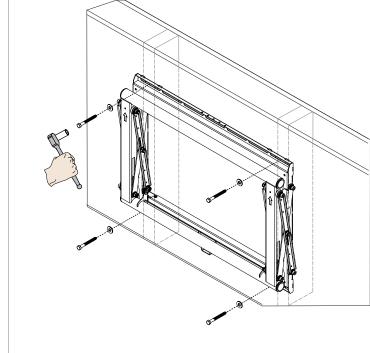

2

4

Installation Guide

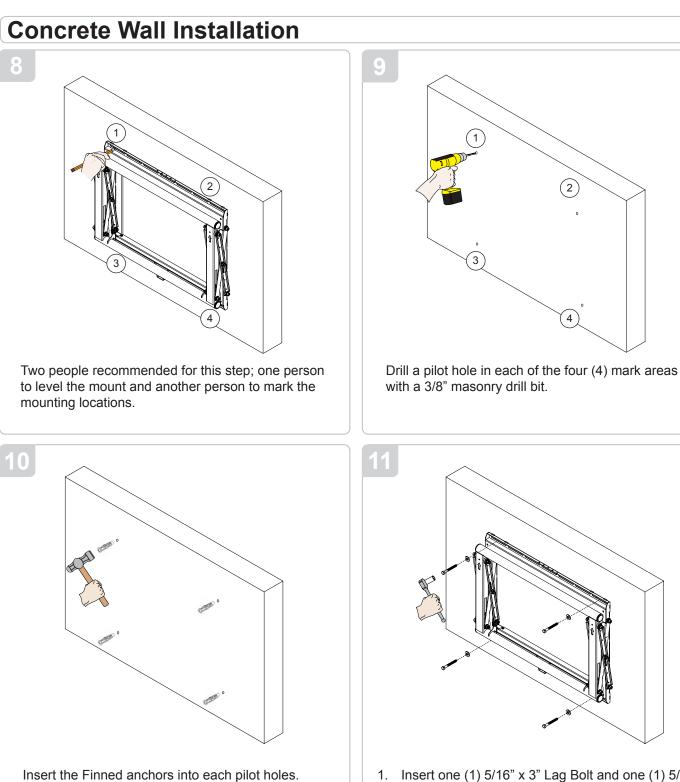

Lightly tap each Finned anchors into place with a


hammer.

- 1. Insert one (1) 5/16" x 3" Lag Bolt and one (1) 5/16" washer into each pilot holes.
- 2. Tighten all lag bolts using a socket wrench and 1/2" socket.




Installation Guide

Installing OPTIONAL Model Specific Spacers

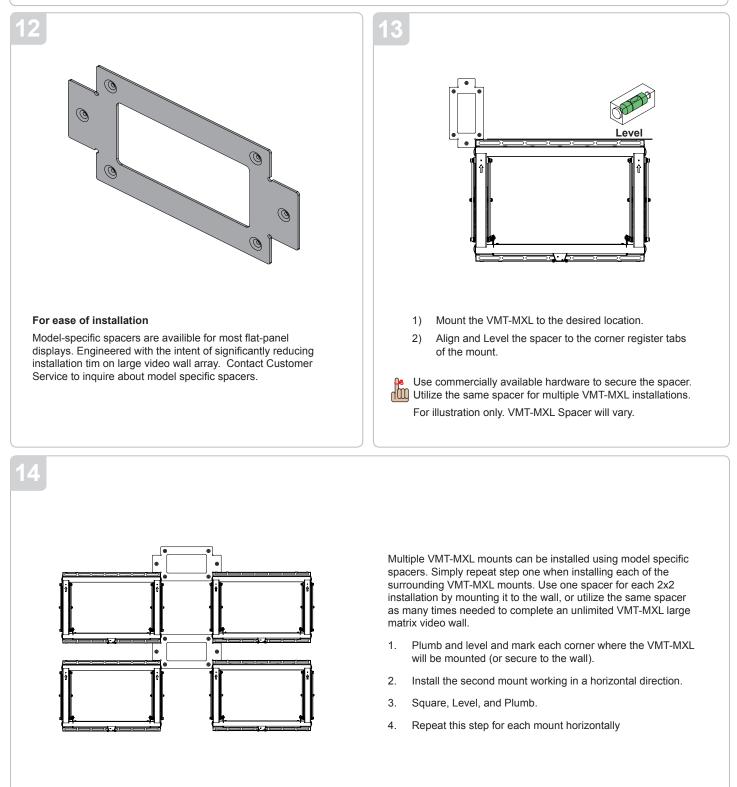




Selecting the Mounting Hardware

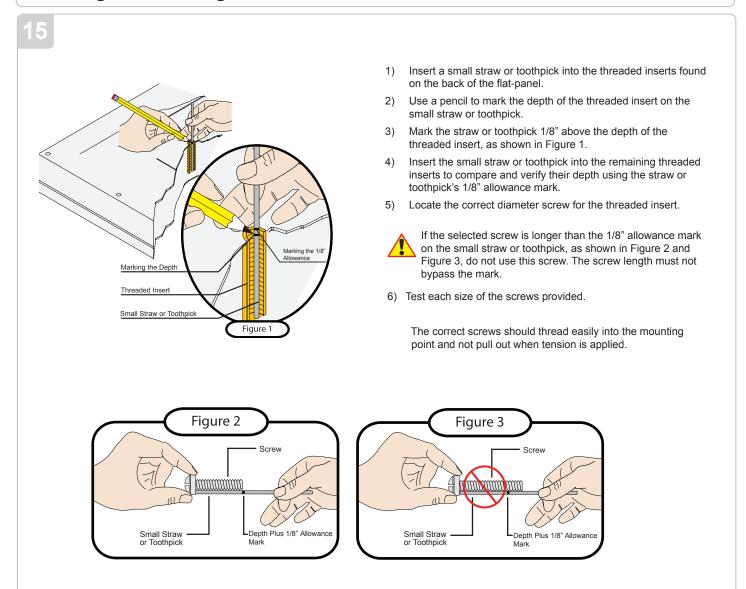




Installation Guide

-**Universal Washer Installation**

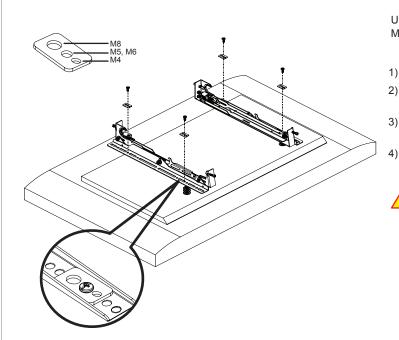

Universal Washers are designed to accommodate the various M4, M5, M6 and M8 hole sizes required by flat-panels.

- Place the flat-panel screen-side down on a soft, flat surface. 1)
- 2) Identify the number and location of the thread inserts on the back of the flat-panel.
- 3) Aligning the holes on each mounting bracket with the thread inserts on the back of your flat-panel.

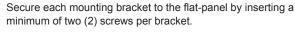




Do not over tighten the mounting hardware.

Make sure the directional arrows on the mounting brackets are facing up.


Universal Spacer Installation

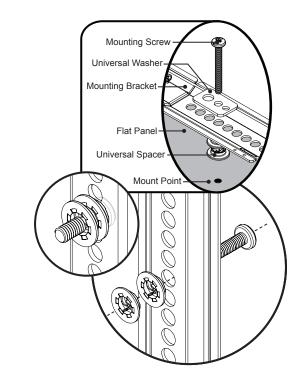

Universal Spacers allow the user to attach the mounting bracket to flat-panels which have recessed or uneven mount points. Each Universal Spacer adds 1/4" to the distance between the mounting bracket and the flat-panel.



The Universal Spacers must be stacked and oriented as shown.

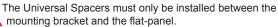




Attaching the Flat-Panel to the Mount


Mounting bracket adjustments are factory pre-set (see Note).


This section requires two people.

Do not release your flat-panel until you are certain that top and bottom hooks of both mounting brackets are securely seated on the upper and lower mounting rails of the wall panel.

- 1) Raise the flat-panel past the top and bottom mounting rails on the wall panel.
- 2) Slide the flat-panel down slowly, keeping it close to the wall.
- Engage the top and bottom mounting brackets to the rails of the mount.

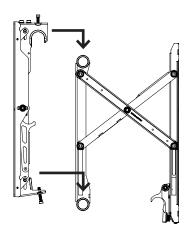

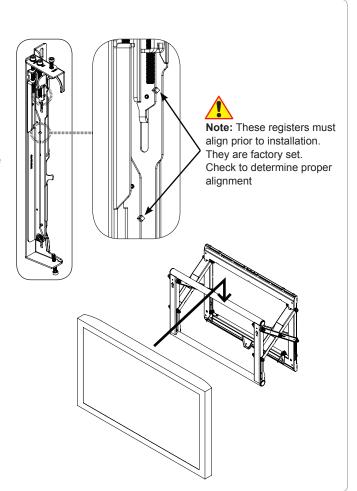

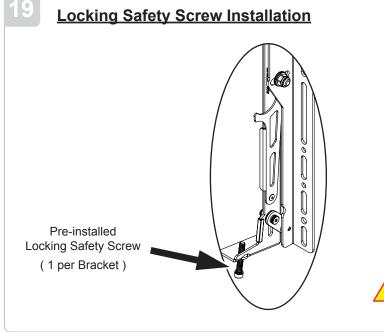

being accidently dislodged from the VMT-MXL.
Locate the pre-installed security locking safety screw at the bottom of each of the mounting brackets.

The locking safety screws keep the flat-panel from

 Use the M5 Allen driver (supplied) to tighten the locking safety screw.


Do not overtighten the locking safety screws.

Note: Tighten screw to surface, then tighten 1/4" turn




PLANAR

1)

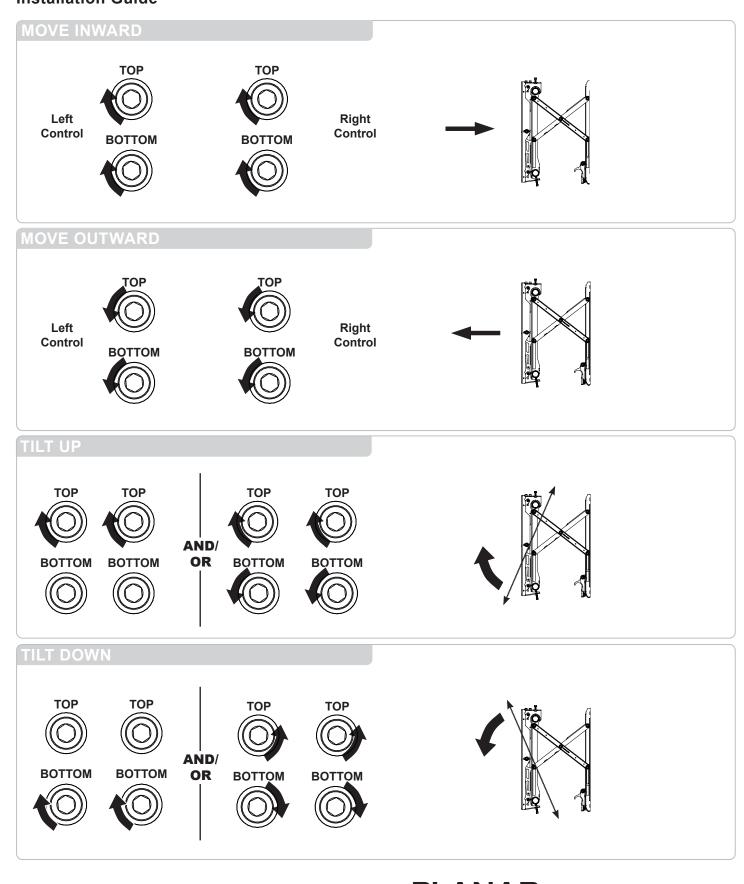


PLANAR

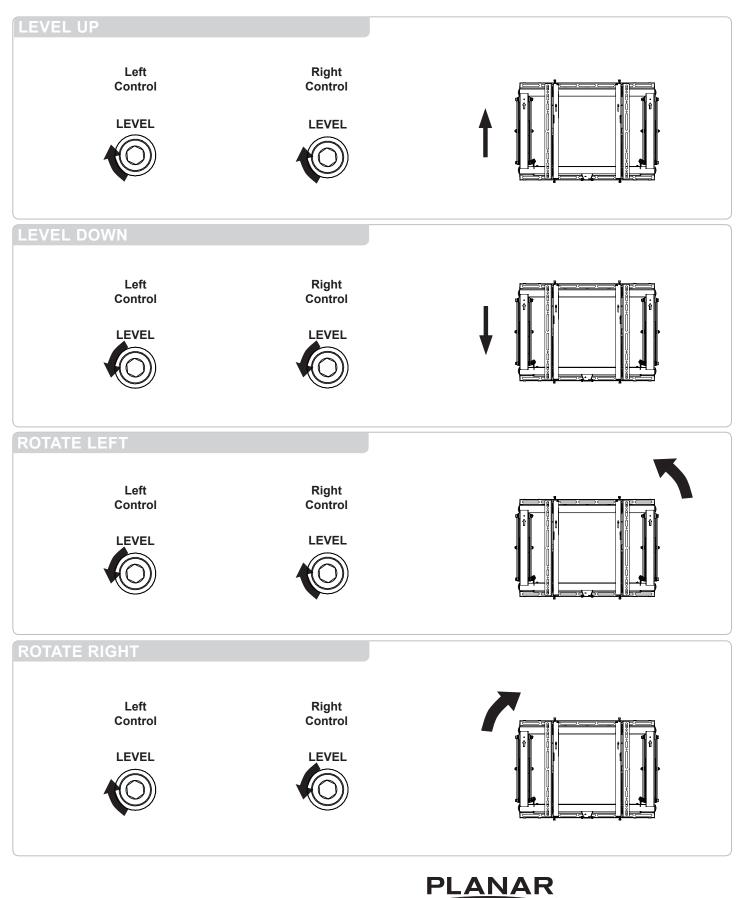


Use the **GAPit GO/No Go Gauge (supplied with model specific spacer)** as a final step in the process to inspect and adjust the gap to **prevent costly replacement** and **extend the lifespan of the displays**.



Damage happens when weight is transferred to the ultra-thin bezels of video wall installations, if the recommended gap specifications of .050" is not maintained vertically and horizontally. This results in image distortion, and costly repairs and replacement

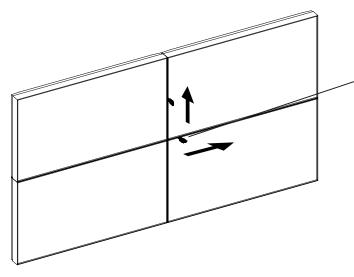

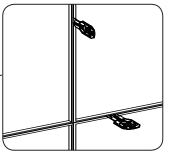

1. Swipe GAPit along vertical gap

SPEC DIM .050" 1.3 MM

GO


NO GO

- 2. Inspect for .050" gap & adjust if needed
- 3. Swipe GAPit along horizontal gap
- 4. Inspect for .050" gap & adjust if needed



<u>Servicing</u>

- 1. Push evenly in the front of the VMT-MXL to release the single latch spring lock (Figure 1).
- 2. Slowly pull the front of the VMT-MXL to extend the scissor arms (Figure 2).
- 3. Loosen the locking safety screws on both mounting brackets.
- 4. Tilt up the bottom of the flat-panel, then set their kickstands against the bottom tubing of the mount (Figures 2 & 3).
- 5. Perform any neccessary repairs. Close the latch after servicing.

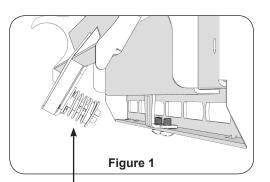

Single Latch Spring Lock

